

Precautions

- Remove the bottom tray and tear off the protection film before use.
- Unplug the light when not being used.
- DO NOT use the light in or around water.
- DO NOT look directly into the light.
- Certain cosmetics or prescriptive lotions can cause sensitivity to the light. Discontinue use immediately.
- DO NOT overexpose the nails or skin to the light.
- DO NOT use gels that are not formulated to cure in the light. It might result in severe chemical burn.
- DO NOT touch or wipe LED bulbs.

Specifications

Size	8"L x 7"W x 3.3"H
Weight	2.2 lbs.
Supply power: input	AC100-240V 50/60Hz
output	DC 12V --- 3A
Power	36W
Number of bulbs	18 LED bulbs
Timer	15s/30s/60s/SOFT
Accessories	Universal AC transformer, user manual

Please note that information in this instruction manual may be changed without notice.

EMMA

Item #621082
emmavsnp.com • 800.520.6000
tng worldwide • New Hudson, MI 48165
©2017 TNG • Made in Taiwan

EMMA

DUET

Multi-Cure LED Light





IMPORTANT INSTRUCTIONS — RETAIN FOR FUTURE USE

Congratulations on your purchase of the **EMMA Duet Multi-Cure LED Light**. Please read the instructions and safety tips before use. Your lamp comes with a one-year limited warranty. If for any reason you need service, please call 800-520-6000.

EMMA Duet Multi-Cure LED light features dual light wavelengths using both LED and UV technology. Duet will cure all brands of gel color and gel systems and its advanced features make it the most affordable yet best-performing light available.

- Adjustable timing settings 15, 30, 60 seconds and SOFT. SOFT turns UV light on and is perfect for builder and sculpture gels.
- Dual LED digital timer display visible to both nail tech and client
- Magnetic hand plate easily removes for use with pedicures
- Hand sensor activated
- Finger dots for optimal hand placement
- Detachable transformer and power pack supply

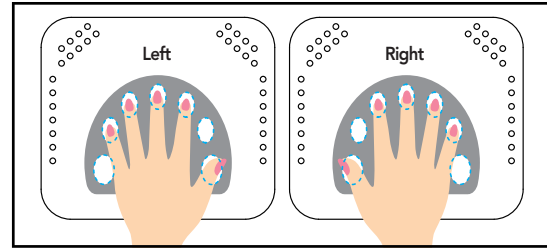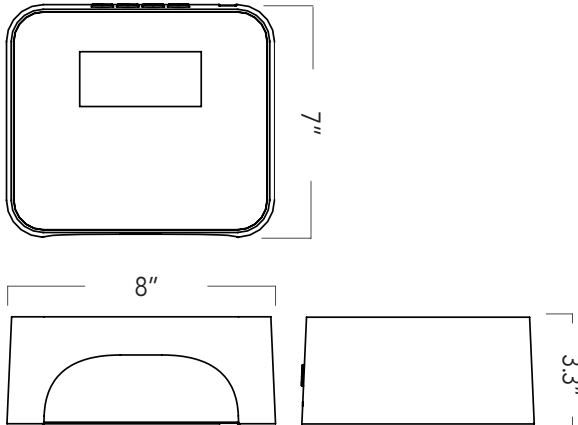

Place your hand onto the tray and adjust your fingers on the anchor position.

How to Operate

1. Plug in the power with dry hands.
2. Select the timer button.
3. Place your hand onto the tray and adjust your fingers to the anchor points, the light will be automatically activated.
4. The device has an auto-timing-countdown function for the set time. (As needs differ, you may replace your hand onto the tray again when the light goes off.)
5. For pedicure, please remove the bottom tray for better curing effect, and repeat the steps 1 to 4.

How to use "SOFT" button

1. Select timer, then press "SOFT" button. Both timer button and soft button light will be on at the same time.
2. Put hand in to trigger sensor. Lamp will start from low power, and gradually climb up until 100%.

Note: Due to the deeper design of this device, please enter your hand inside the lamp right in the middle and adjust the fingers to suitable position while curing gels. If stretching fingers too excessively, there might be some gel that couldn't be cured completely.